



5000B-500

Multi-channel Solid State Source Driver/Controller



Innovations in Optics offers the 5000B-500 Solid-State Source Driver/Controller with Ethernet and serial connectivity to independently drive, control and modulate as many as 20 different solid-state sources, including combinations of LEDs and LDs and even IR VCSEL arrays.

Powered from a universal VAC input, the 5000B-500 Solid-State Source Driver/Controller provides precise output control of solid-state sources on each channel, up to 20 channels in total. Its ground based design can be configured for common anode, common cathode or combinations to work with all types of P-Up and P-Down LED or LD devices.

The 5000B-500 provides constant current control up to 4A per source channel to achieve optimal performance. Pulse widths on the order of 1 μsec are achievable with short lead lengths. Any given number of like channels can be paralleled together, making this a flexible source capable of delivering between 4A to 80A drive current to a single solid-state source. The output parameters for each source channel are set through USB or Ethernet using a simple command set. Output is initiated over an external trigger BNC.

Features:

- 20 Constant current outputs
- Ground based outputs for use with COB/MCB technology
- Independent current control per channel
- Independent PWM dimming per channel
- Universal AC input
- Thermistor & photosensor inputs
- External trigger BNC
- USB and Ethernet connectivity

Options:

- Three anode/cathode output combinations
- Rack mounting hardware kit

Applications:

- Industrial machine vision
- CCTV security systems
- License plate recognition (LPR) systems

Table of Contents

Product Specifications.....2
 Installation Control Drawing.....3

5000B-500 SERIES 20 CHANNEL DRIVER/CONTROLLER
SPECIFICATIONS

Parameter	Specification	Comment
Type	Constant current, dimmable	20 channels
Output current	0.0 - 4.0 Amps	Per channel
Output voltage	5.5 Volts	Max per channel
Input voltage	100 – 264 VAC 47 – 63 HZ 120 – 370VDC	Universal AC input /full range
Current ripple	2% RMS maximum	At maximum voltage (5.5V DC)
Operating modes	Continuous mode (CM) or pulsed mode	User selectable
Internal PWM dimming	5 - 100% @ 15 kHz	Per channel
BNC trigger input	Instantaneous or programmable delay	User enabled
Rise time*	<2 μsec	PWM and trigger
Fall time*	<1 μsec	PWM and trigger
LED module I/O	Thermistor, photosensor	Monitoring
Pulse repetition rate	30 kHz	Maximum
Pulse width	1 μsec	Minimum
Connectivity	USB 2.0 10/100 Mbps ethernet	Standard-A type RJ-45
Programming	Command set for serial (USB) and telnet (Ethernet) communication	
Fan output supply	+24VDC	2-pin positive latch Molex SL
Size and weight	430 X 203 X 93 (mm, L x W x H), ~6 kg 430 X 203 X 86 (mm, L x W x H), ~6 kg	
Rack mounting	2U half-rack	Optional kit


* Tested with 5cm total lead length



Standard Configurations	Description
5000B-500-001	20 common anode outputs
5000B-500-002	20 common cathode outputs
5000B-500-003	10 common anode and 10 common cathode outputs

INSTALLATION CONTROL DRAWING

REVISIONS			
REV	DESCRIPTION	DATE	ECO
1	PRERELEASE	5/27/2016	MC

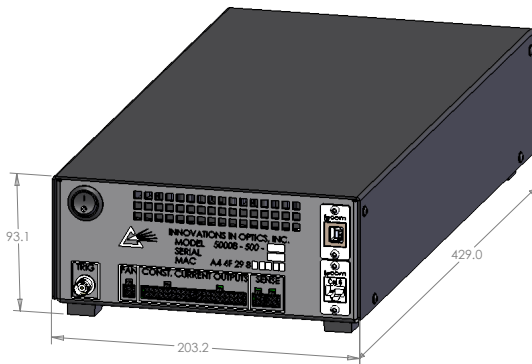

Plot Date: Friday, May 27, 2016 Last Saved Friday, May 27, 2016 1:35:41 PM by: MarC

- NOTES:
1. CONTENT FOR REFERENCE ONLY AND SUBJECT TO CHANGE
 2. REFER TO ADDITIONAL DOCUMENTATION

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN MILLIMETERS

TOLERANCES:
1 PLACE DECIMAL: ±0.2
2 PLACE DECIMALS: ±0.10
3 PLACE DECIMALS: ±0.050
ANGLE: ±1°

DRW	MC	DATE	5/27/2016
ENG	MC	DATE	5/27/2016
ENG APVD	TB	DATE	5/27/2016



INNOVATIONS IN OPTICS, INC.
82 Cummings Park
Woburn, MA 01801
TEL: (781) 933-4477 FAX: (781) 933-0007

TITLE
LED DRIVER 20-CHN

SIZE **B** DWG. NO. **5000B-500_ICD** REV **1**

SCALE: 1:2 SHEET 1 of 1

THIS DRAWING AND SPECIFICATIONS HEREIN ARE THE PROPERTY OF INNOVATIONS IN OPTICS, INC. AND SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART AS THE BASIS FOR THE MANUFACTURE OR SALE OF OTHER PRODUCTS WITHOUT THE EXPRESS WRITTEN PERMISSION OF INNOVATIONS IN OPTICS, INC.

The products, their specifications and other information appearing in this document are subject to change by Innovations in Optics, Inc. (IOI) without notice. IOI assumes no liability for errors that may appear in this document, and no liability otherwise arising from the application or use of the product or information contained herein. None of the information provided herein should be considered to be a representation of the fitness or suitability of the product for any particular application or as any other form of warranty. IOI product warranties are limited to only such warranties as accompany a purchase contract or purchase order for such products. Nothing herein is to be construed as constituting an additional warranty. No information contained in this publication may be considered as a waiver by IOI of any intellectual property rights that IOI may have in such information. LumiBright™ is a trademark of IOI, all rights reserved. This product is protected by U.S. Patents and Patents Pending in the U.S. and other countries.